


Clad Talon RetroFit Double Hung Measuring Guide

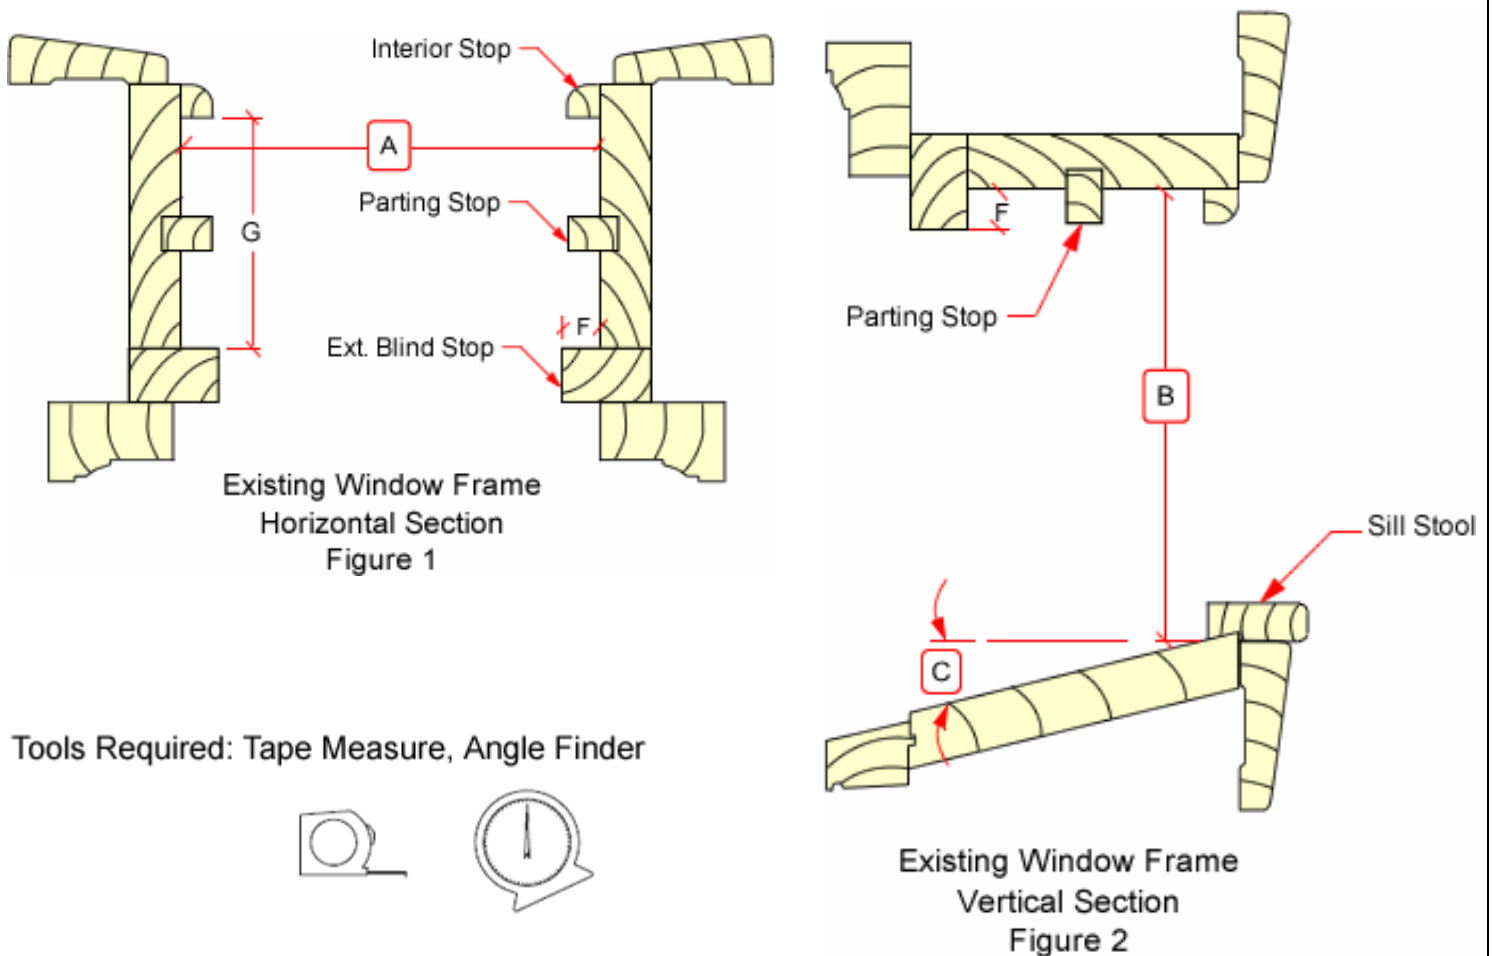

Step 1. Measure inside opening width (A) at three locations - top, middle, & bottom. See Figure 1. Record the smallest measurement.

Step 2. Measure inside opening height (B). See Figure 2 at 3 locations; left, middle, & right. Record the smallest measurement.

Step 3. Measure sill angle (C). See figure 2. Record on worksheet. Sill angles less than 8 degrees will be manufactured with a filler block to square off the RetroFit frame.

Step 4. After measuring all window openings, please attach completed form and email to: info@eaglewindowne.com – thank you

Note: RetroFit unit will be manufactured in ¼" frame size increments only.

